


Молния

—
PASSPORT
PEARL

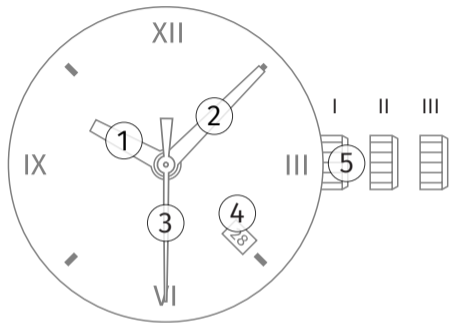

- 1 – hour hand
- 2 – minute hand
- 3 – second hand
- 4 – date aperture
- 5 – three position winding crown

- I – neutral position
- II – position for setting the date
- III – position for setting the time

DESCRIPTION, FUNCTIONS AND DISPLAYS

The Pearl is a wrist watch with a quartz movement.

1. SETTING THE CURRENT DATE

To set the date, pull the winding crown out from the case until you hear the first click (position II). The watch will continue to run in this position. Set the date by turning the winding crown counterclockwise.

When you set the date for the first time, you must set the date to one day before the current date. The current date must be set by rotating the hands of the timepiece in position III. This will allow the watch to determine the day-night mode.

To change the date in a short month, move the winding crown to position II and rotate it clockwise to set the correct date. The watch continues to run when you are setting the date, so you do not need to correct the time.

2. SET THE CURRENT TIME

To set the current time, pull the winding crown out from the case until you hear the second click (position III). The watch is stopped in

this position. To set the precise time, stop the second hand when it is at 12 o'clock. Turn the winding crown clockwise to set the current time forward by one minute. Wait for the exact minute signal (on a computer screen, TV) and move the winding crown to position I. Rotating the hands counterclockwise is not recommended.

Setting the winding crown in position III is also used to save the battery energy (up to 70%), which is recommended when the watch is not being used for a lengthy period of time.

3. EOL (END OF LIFE) INDICATION – BATTERY IS EMPTY

Если секундная стрелка совершает только один скачок в 4 секунды, это означает, что запас хода исчерпан и необходимо заменить батарейку.

INSTRUCTIONS FOR USE, CARE AND STORAGE

1. WATER RESISTANCE

Pearl watches have a water resistance of 5 atm, this water resistant mark is conditional and denotes a pressure of 5 atmospheres. This watch will not be damaged by splashes or rain, and you can wash your hands without taking it off. The watch must not be used in swimming, snorkeling, scuba diving or any other diving.

ATTENTION: PLEASE REMEMBER THAT YOU MUST NOT PULL THE CROWN OUT WHEN THE WATCH IS WET.

Over time, seals will age and become worn, which will have a negative impact on the water resistance of the watch. We recommend that you have the condition of the gasket examined and the water resistance checked once a year at an authorized service center and have the seal replaced if necessary.

2. CARE

We recommend that you clean the watch regularly (except for the leather strap) with a soft cloth moistened with warm soapy water.

3. PRECAUTIONARY MEASURES

- Never attempt to open the case or remove the back cover by yourself.
- The rubber gasket protecting the watch from water and dust should be replaced every 2-3 years.
- If the inside of the watch gets wet, you should bring it to an authorized service center to have it checked immediately.
- Do not expose the watch to extreme temperatures.
- Treat the watch with care and avoid any hard impact (bumps, falls, etc.).
- Do not fasten the strap too tightly. You should be able to slide a finger between your wrist and the strap.
- The watch should be stored in a dry place.
- Do not let it come in contact with gasoline, cleaning solvents, spray aerosols, adhesives, paint, etc. These substances cause chemical

reactions which could damage the gasket, case and the polished surfaces of the watch.

- Sapphire crystal is quite durable, but it may crack if the watch is dropped or hit.
- Avoid storing your watch with precious jewelry, as diamonds can damage sapphire crystal.
- It is preferable to store the watch in a special separate box, lined with soft protective material.

TECHNICAL SPECIFICATIONS

Case diameter	41 mm
Case material	316L Steel
Strap width	20*18 mm
Type of glass	Sapphire crystal
Movement	Ronda 715 quartz movement
Accuracy	-10 ...+20 seconds per month
Battery type	371/SR920SW
Battery life	60 months

WARRANTY

In accordance with the Decree of the Government of the Russian Federation No. 471 from 27.05.2016 «On amendments to certain acts of the Government of the Russian Federation on the return or exchange of technically sophisticated goods», this product is categorised as a technically sophisticated, and therefore, the buyer does not have the right to demand a free replacement for the repair period or a demand it be replaced with a similar product, and the buyer does not have the right to return or exchange the product with similar products of a different size, shape, different dimensions, style, colour or configuration.

The warranty only applies to products purchased from authorized sales outlets.

The manufacturer's warranty is valid for one (1) year from the date of sale of the product. The warranty covers defects and faults in assembly materials. If a problem should arise during the warranty period, the manufacturer shall rectify any defects or repair any malfunctions absolutely free of charge. If the quality of the watch is not able to be restored through repairs, the manufacturer guarantees the replacement of the watch with the same watch or a model

with identical specifications. Repairs should only be carried out at authorized service centres. The contact details for authorized service centres are provided by authorized sales representatives.

LIMITATIONS AND RESTRICTIONS

The warranty does not cover:

- glass and strap;
- wear and tear or defects resulting from the use of the watch (e.g. scratches on the glass, changes in the colour and/or material of non-metallic straps and bracelets, etc.);
- any damage to any part of the watch resulting from improper use, lack of care, or careless handling of the watch (bumps, chips, dents, cracks, etc.);
- any unauthorized repair or the owner's own tampering with the design of the watch and/or its appearance automatically excludes these watches from warranty service.

WARRANTY CARD

All warranty claims for repairs must be accompanied by a warranty card which has been filled out by both the buyer and the vendor who sold the watch.

SERIAL NUMBER _____

DATE OF SALE _____

VENDOR

name of trading
organization _____

Address and phone
number _____

(trading organization)

STAMP HERE _____ BUYER

I have read and agree with the terms of use. I do not have any complaints regarding the appearance or the performance of the watch.

**ATTENTION! THE WARRANTY CARD IS NOT VALID
WITHOUT THE VENDOR'S STAMP!**

NOTES

Name of the authorized service centre

The following steps have been taken in troubleshooting:

Service centre employee Date

(Signature, full name)

Owner Date

(Signature, full name)

NOTES

+7 (351) 700-13-80

+7 (351) 700-13-79

454091, Russian Federation,
Chelyabinsk, 25 Tsvillinga Street

marketing@molnija-ltd.ru

www.molnija-ltd.ru

www.molnija.shop

МОЛНИЯ