

Молния



PASSPORT

GREEN RAY VERSION 2



- 1 – Hour hand
- 2 – Minute hand
- 3 – Subsidiary second hand
- 4 – Winding crown



- I – First (winding) position
- II – Second (time-setting) position, crown fully pulled out

DESCRIPTION AND INSTRUCTIONS

The GREEN RAY version 2 wrist watch comes equipped with the 3603 manually wound shock-resistant mechanical movement.

1. WINDING

Winding is performed by turning the crown in a clockwise direction while the crown is in the first position. Full winding takes 23 turns of the crown. Be sure to stop winding as soon as any resistance is felt.

IMPORTANT: Continuing to wind the watch after feeling resistance can lead to damage of the spring. All repairs necessitated by overwinding will be made at the customer's expense.

The provided power reserve is approximately 40 hours. We recommend winding once per day.

2. SETTING THE CURRENT TIME

Pull out the crown to the second position. Set the current time by turning the crown in a clockwise direction.

After setting the current time return the crown to the first position by pressing the crown towards the case.

DIRECTIONS FOR USE, CARE AND STORAGE

1. WATER RESISTANCE

GREEN RAY version 2 watches have a water resistance of 10 ATM, this water resistant mark is conditional and denotes a pressure of 10 atmospheres. This watch will not be damaged by splashes or rain, and you can wash your hands without taking it off. You can swim with this watch and it can be submerged in water. However, these watches are not suitable for scuba diving.

ATTENTION: PLEASE REMEMBER THAT YOU MUST NOT PULL THE CROWN OUT WHEN THE WATCH IS WET.

Over time, seals will age and become worn, which will have a negative impact on the water resistance of the watch. We recommend that you have the condition of the gasket examined and the water resistance

checked once a year at an authorized service center and have the seal replaced if necessary.

2. CARE

The watch (excluding the strap) should regularly be washed with a wet, soapy rag.

3. PRECAUTIONS

- Never try to open the watch or remove the case back
- The watch should be checked at least once a year for resistance to water and dust. If necessary, replacement of the gaskets should be performed only in authorized service centers.
- Before submerging the watch in water, make sure the crown is in the first position.
- If water enters the case, bring the watch to an authorized service center as soon as possible.
- Do not subject the watch to extreme conditions (above 60 degrees Celsius or below -5 degrees Celsius). While the watch is being worn body heat protects it from extreme temperature changes.

- Do not drop, hit, or strike the watch.
- Do not fasten the strap too tightly. The watch should be fastened as to allow a finger between the watch strap and arm.
- The watch should be kept in a dry place.
- Prevent the watch from being exposed to gasoline, cleaning supplies, aerosols, paints, etc, as they may react with it and damage the gaskets, case and/or its coating.
- The sapphire crystal has a special anti-scratch coating but can crack if struck or dropped.
- Store the watch away from jewelry, as diamonds can scratch the crystal.
- Store the watch in a separate box lined with soft fabric.

TECHNICAL CHARACTERISTICS

| | |
|--|---|
| Case diameter | 44 mm |
| Case material | Steel 316L |
| Strap width | 22 – 20 mm |
| Strap material | Genuine leather |
| Type of glass | Sapphire crystal |
| Accuracy under normal temperature | - 15 ... + 40 seconds per day |
| Movement | Mechanical, manually wound, caliber 3603, 18 jewels |
| Power reserve | up to 40 hours |
| Water resistance | 10 atm |

CONDITIONS OF WARRANTY

The warranty covers only those watches sold by authorized dealers.

Warranty lasts for 1 year from date of purchase. The warranty covers material and assembly defects. In the event of a problem falling under the conditions of the warranty the manufacturer will repair the defect at no cost to the consumer. If a repair is impossible, the manufacturer will replace the watch with an identical one, or one with the same characteristics. Repairs should take place only in authorized centers. To find an authorized service center, contact your local retailer.

EXCLUSIONS

Warranty does not cover:

- Crystal and strap
- Problems arising from use of the watch (scratches on the crystal, color changes of non-metallic straps and bracelets etc)
- Any damage caused from improper use of the watch, lack of maintenance or mishandling (scratches, cracks, dents, etc)
- Any unauthorized attempts to repair the watch and/or change the appearance or construction of the watch
- Water damage caused from improper use of the crown

WARRANTY CARD

All warranty claims for repairs must be accompanied by a warranty card which has been filled out by both the buyer and the vendor who sold the watch.

SERIAL NUMBER _____

DATE OF SALE _____

VENDOR

name of trading
organization _____

Address and phone
number _____
(trading organization)

STAMP HERE _____ BUYER

I have read and agree with the terms of use. I do not have any complaints regarding the appearance or the performance of the watch.

**ATTENTION! THE WARRANTY CARD IS NOT VALID
WITHOUT THE VENDOR'S STAMP!**

Name of the authorized service centre

The following steps have been taken in troubleshooting:

Service centre employee

Date

(Signature, full name)

Owner

Date

(Signature, full name)

+7 (351) 700-13-79

+7 (495) 741-95-36

454091, Russian Federation,
Chelyabinsk, 25 Tsvillinga Street

sales@molnija.shop

www.molnija.shop

Молния