

Молния

PRODUCT CERTIFICATE

EVOLUTION 3.0



- 1 – Hour hand
- 2 – Chronograph second hand
- 3 – Minute hand
- 4 – Small second hand
- 5 – Chronograph minute hand



- I – Neutral position
(not pulled out)
- II – Neutral position 2
(half pulled out)
- III – Position for setting the time
(fully pulled out)
- 7 – Current date
- Button A and button B

DESCRIPTION, DISPLAYS AND FUNCTIONS

BEFORE YOU BEGIN USING THE WATCH, PLEASE READ THIS IMPORTANT INFORMATION

The **EVOLUTION 3.0** wrist watches are battery powered chronograph watches with a quartz movement.

1. SETTING THE TIME

Pull the winding crown out into position III.

When doing this make sure the chronograph second hand remains in the 0 position.

Turn the winding crown counterclockwise to set the current time.

Push the winding crown back into its original position.

The small second hand will start moving.

2. SETTING THE CURRENT DATE

Pull the winding crown out into position II.

Turn the winding crown clockwise to set the current date. Push the winding crown back into its original position.

WARNING! DO NOT SET THE DATE BETWEEN 21.00 and 01.00.

3. USING THE CHRONOGRAPH

A chronograph (stop watch) is a watch with an additional function, allowing the user to measure intervals of time (seconds, minutes and hours). To switch on the stop watch and minute time function, press button A (START). Press it again to stop the stop watch (STOP). The lower button, B, is used to reset the reading (RESET).

Resetting the chronograph reading (including after changing the battery).

The chronograph must be reset when either its second or minute hand fail to return to ZERO after resetting the chronograph, including after changing the battery.

To reset the chronograph, it is necessary to:

Pull the winding crown out into position III.

Press button A to return the chronograph second and/or minute hand to the ZERO position.

Return the winder to its original position I.

**WARNING! UNDER NO CIRCUMSTANCES SHOULD YOU PRESS
BUTTON B WHILE THE STOP WATCH IS ON. THIS COULD DAMAGE
THE WATCH.**

INSTRUCTIONS FOR USE, CARE AND STORAGE

1. WATER RESISTANCE

The watch is water resistant to 10 ATM, a standard specification which means the watch can withstand a pressure of 10 atmospheres. These watches are resistant to splashes, rain, and you can wash your hands wearing the watch. You can swim while wearing the watch and it can be submerged in water. However, these watches are not suitable for scuba diving. Please note that the winder must not be pulled out of the watch and the control buttons must not be pressed when the watch is wet.

2. BATTERY

The intended service life of the battery is from 1 to 4 years. If you are not going to wear the watch for several weeks or months, we recommend pulling the winder out to position III. This will extend the battery life. At the end of its service life, the battery must be removed immediately and replaced by an authorized service center.

3. CARE

We recommend that you clean your watch regularly (apart from the leather or silicone straps) with a soft cloth moistened with warm soapy water.

4. PRECAUTIONS

- Never attempt to open the case or remove the back cover yourself.
- The rubber gasket protecting the watch from water and dust should be replaced every 2-3 years.
- If any moisture gets inside the watch, immediately have its condition checked by an authorized service center.
- Do not expose the watch to extreme temperatures.
- Do not handle the watch roughly (hitting, dropping it etc.).
- Do not fasten the strap too tight. There should be a finger-wide gap between the wrist and the strap.
- The watch should be stored in a dry place.
- Keep the watch away from gasoline, cleaning solvents, aerosols from sprayers, adhesives, paints, etc. Chemical reactions caused by these materials can damage the seals, the case and finish of the watch.
- The sapphire crystal is relatively strong, but it may crack if the watch is dropped or hit.
- Avoid storing your watch with jewelry containing diamonds, as these can damage the sapphire crystal.

- Store your watch in a separate, preferably specially designed case, lined with a soft protective material.

TECHNICAL SPECIFICATIONS

Case diameter	42 mm
Case material	Steel 316L
Strap width	22 mm
Strap material	Genuine leather
Type of glass	Sapphire crystal
Accuracy at normal temperatures	+/-20 seconds per month
Movement	Miyota 6S21-00Z Quartz movement
Function	Measuring time in hours, minutes and seconds; 60-minute timer; topwatch; Date.
Standart Battery	399
Battery service life	4 years

WARRANTY CONDITIONS

The warranty applies only to products purchased from authorized sales representatives.

The manufacturer's warranty is 1 (one) year from the date of the product's sale. The warranty covers defects and faults in assembly and materials. If the watch is found to be faulty within the warranty period, the manufacturer undertakes to remedy the faults or malfunctions free of charge. If the repair fails to return the watch to its previous quality, the manufacturer guarantees that it will replace the watch with another of the same model or a model with identical characteristics. Repairs should only be carried out by authorized service centers. The contacts of authorized service centers are provided by an authorized sales representative.

EXCEPTIONS

The warranty does not cover:

- the glass and strap;
- defects in the watch caused by its use (e.g. scratches on the glass, changes in the color and/or material of non-metallic belts and bracelets, etc.);
- any damage to any part of the watch caused by misuse, neglect, or carelessness (shock, potholes, dents, cracks, etc.);
- any unauthorized repair or unauthorized interference with the interior and/or exterior of the watch will automatically invalidate the warranty;
- moisture getting into the watch because it is used underwater while the winding crown is not in the fixed position.

WARRANTY CARD

All warranty repair claims must be accompanied by a warranty card filled in by both the buyer and the seller of the watch.

SERIAL NUMBER _____

DATE OF SALE _____

SELLER

Name of trading organization

Address and telephone number of trading organization

PLACE FOR STAMP _____ BUYER

I have read and agree with the operating instructions.
I have no complaints concerning the external
appearance or performance of the watch.

**WARNING! THE WARRANTY CARD IS NOT VALID WITHOUT
THE SELLER'S STAMP!**

Name of the authorized service center

The following work has been performed to repair the watch:

Service centre employee

Date

(Signature, full name)

(Signature, full name)

Owner

Date

(Signature, full name)

(Signature, full name)

8 351 700 13 79

25 Zwilling Street, Chelyabinsk,
454091 Russian Federation

sales@molnija.shop
www.molnija.shop

Молния