




HYRON



MANUAL

DIVERMASTER

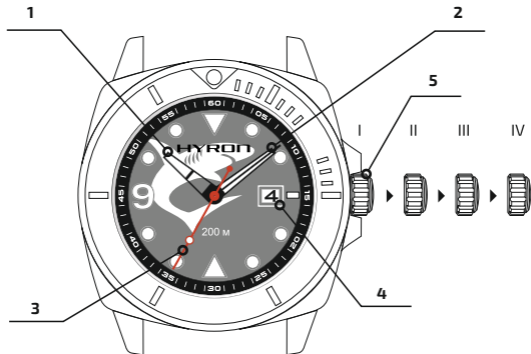

1 – hour hand

2 – minute hand

3 – second hand

4 – date indication window

5 – fixated/screw-down winding stem

I – fixed/screwed position

II – position for winding, winding stem is unscrewed

III – position for date setting, winding stem is drawn out up to the first click

IV – position for time setting, winding stem is fully drawn out

DESCRIPTION, INDICATION AND FUNCTIONS

The DIVEMASTER watch is a wristwatch with a mechanical hand winding movement and water resistance 200 m.

1. WINDING

Remove the winding crown from the safe/screwed position by turning it around few times in a counter-clockwise direction up to the light click, in doing so putting it in the winding position. Then perform the winding by clockwise rotation.

Full winding – 23 turns of the winding stem. Stop the rotation as soon as you feel the resistance.

Power reserve is approximately 42 hours. It is recommended to wind the watch once a day.



WARNING: IF YOU CONTINUE WINDING THE WATCH AFTER YOU FELT THE RESISTANCE, THERE IS A RISK OF BREAKING THE TIP OF THE SPRING. IN THIS CASE, REPLACEMENT OF THE BARREL DRUM AT THE EXPENCE OF THE OWNER WILL BE REQUIRED.

2. DATESETTING

Draw the winding crown out up to the first click by pulling it in a direction away from the case. Rotate the winding crown in a clockwise direction up to the moment of setting the required date in the indication window.



3. CURRENT TIME SETTING

Draw the winding crown out up to the second click. Set the required time by rotating the winding stem in a counter-clockwise direction.



After setting of current date, time and winding of the watch put the winding crown back in the neutral position by pressing it in a direction to the case and put it back in the safe/screwed position by rotating it in a clockwise direction. **Only in such a position of the winding crown water resistance at depth down to 200 m is guaranteed**

RULES OF OPERATION, MAINTENANCE AND STORAGE

1. WATER RESISTANCE

The DIVERMASTER watch has water resistance of 20 ATM and are equipped with the fixated winding crown, which allows using them underwater during scuba diving.

For safe wearing of the watch underwater, the winding crown should always remain in the screwed position. Do not move the winding crown from fixed position when the watch is underwater.

As time passes, the watch wear-out and aging of sealing gaskets adversely affect the degree of watch water resistance. We recommend to perform the checkup of the sealing gasket and the degree of watch water resistance in the authorized service center once a year and to replace it if necessary.

WARNING: IT IS FORBIDDEN TO USE THE WINDING CROWN UNDERWATER. NON-COMPLIANCE WITH THESE RECOMMENDATIONS LEADS TO THE BREAK OF AIRTIGHTNESS AND LOSS OF THE WATCH WARRANTY.

2. MAINTENANCE

Clean the watch and the silicone strap on a regular basis. After contact of the watch with salt water, wash it in warm soapy water using toothbrush, then wipe it with a soft cloth.

3. SAFETY MEASURES

- Never try opening the case and removing the back cover of the watch by yourself.
- Checkup of the sealing gasket protecting the watch from water and dust ingress should be performed at least once a year. Its replacement should be performed as necessary and only in the authorized service center.
- When watch is dipped in the water, the winding crown should be in the fixed/screwed position.
- In case of moisture ingress in the inner part of the watch, immediately check their condition in the authorized service center.
- Do not expose the watch to the following temperature extremes: higher than 60 degrees centigrade and lower than -5 degrees centigrade. When the watch is placed on hand, its warmth protects the watch from the extreme temperature drops.
- Avoid rough treatment of the watch (hits, falls etc.).
- Do not buckle the strap too tight. The finger should fit between the strap and wrist.
- Watch should be stored in a dry place.
- Keep watch safe from the ingress of gasoline, cleaning solvents, sprays from sprinklers, adhesive substances, paint etc. Chemical reactions caused by these materials may lead to the destruction of sealing gaskets, the case and protective coating of the watch.
- Sapphire glass is strong enough and has special coating preventing the occurring of scratches, but it may crack if you drop or hit the watch.
- Avoid storing the watch along with jewelry as brilliants may damage the sapphire glass.
- Keep watch in a separate, preferably special box covered outside with a soft protective material.

SPECIFICATIONS

Case diameter	48 mm
Case material	steel 316L
Strap width	26 – 24 mm
Strap material	silicone
Glass type	sapphire glass
Accuracy movement under normal temperature conditions is	+/- 20 sec per day
Mechanical movement	hand winding Sellita
	215-1, 19 jewels
Power reserve	42 hours
WR	20 ATM/ 200 m

WARRANTY CONDITIONS

The warranty covers only products purchased from the authorized commercial representative.

Manufacturer's warranty lasts 1 (one) year from the moment of product selling.

The warranty covers flaws and defects of materials and assembly. If malfunction appears during the warranty period, manufacturer is obliged to eliminate any defects and/or malfunctions. If repair cannot restore the watch quality, manufacturer guarantees the replacement of the watch with its analogue or with the model with identical specifications. Repair should be performed only in the authorized service centers. The authorized commercial representative provides the contacts of the authorized service centers.

LIMITATIONS

The warranty does not cover:

- glass and strap;
- watch defects occurred as a result of its usage (for example, scratches on glass, change of color and/or material of non-metallic straps and bracelets etc.);
- any damage on any part of the watch occurred as a result of incorrect usage, absence of maintenance, mishandling (hits, dents, bents, cracks etc.);
- any unauthorized repair or interference in the watch construction and/or its outer appearance mean the automatic loss of warranty;
- ingress of moisture inside of the watch as a result of using them underwater with unfixed winding stem.

HYRON

WARRANTY CERTIFICATE

Serial number : _____ Date of sale : _____

Seller (name of the store):

Seller's address and phone number:

(seller's stamp is required)

Buyer's signature :

I have read the manual and agree.

I have no claims on appearance and performance of the product.

