


Молния

—
PASSPORT
BAIKAL

- 1 – hour hand
- 2 – minute hand
- 3 – second hand

- 4 – date aperture
- 5 – screw-down winding crown

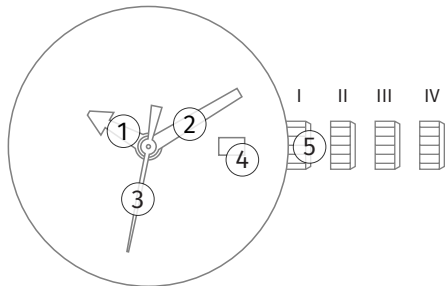

- I – screwed-down position
- II – winding crown unscrewed
- III – position for setting the date, winding crown pulled out to the first click

- IV – position for setting the time, the winding crown is pulled out fully

DESCRIPTION, FUNCTIONS AND DISPLAYS

The Baikal wrist watch features an automatic winding watch movement.

Before setting the current time, date or manually winding the watch, release the winding crown from the safe/screwed-down position. In order to do so, you need to turn the crown several times in a counterclockwise direction until you hear a gentle click, which will let you know it is now in the unscrewed position for winding.

1. WINDING

Automatic winding

Constant arm movements cause the rotor to pivot and then the self-winding mechanism sets the watch in motion.

Manual winding

When using the watch for the first time or if it has not been worn for a long period, it is recommended to wind the watch 8-10 times, rotating the winding crown clockwise. For future reference, you need to rotate the winding crown 40 times in order to fully wind the watch manually. The power reserve is approximately 42 hours. Stop rotating the crown as soon as you feel any resistance.

ATTENTION: IF YOU CONTINUE TO WIND THE WATCH AFTER YOU HAVE FELT RESISTANCE, YOU RUN THE RISK OF BREAKING THE TIP OF THE SPRING. IF THIS OCCURS, THE BARREL WHERE THE MAINSPRING IS WILL NEED TO BE REPLACED AT THE OWNER'S OWN EXPENSE.

2. SETTING THE CURRENT DATE

Pull the winding crown of the movement out into position III.

Turn the winding crown counterclockwise to set the current date.

Do not set the date between 21.00 and 01.00. This could damage the watch movement

3. SET THE CURRENT TIME

Pull the winding crown of the watch movement out to position IV.

Turn the winding crown counterclockwise to set the current time.

Push the winding crown back into its original position. The second hand will start moving.

After setting the current date, the time and having wound the watch, return the winding crown to the neutral position by pressing it in towards the case and return it to the safe/screwed-down position by

rotating it clockwise. The watch is only guaranteed water resistance at a depth of 100 m when the winding crown is in this position.

INSTRUCTIONS FOR USE, CARE AND STORAGE

1. WATER RESISTANCE

The Baikal watch has a water resistance of 20 ATM and is equipped with a fixed winding crown, which makes it possible to use the watch in underwater diving.

If you wish to wear the watch underwater, the winding crown must always be in the locked position. Do not unlock the winding crown when the watch is underwater.

ATTENTION: THE WINDING CROWN MUST NOT BE ADJUSTED UNDERWATER. FAILURE TO FOLLOW THESE INSTRUCTIONS WILL LEAD TO THE SEAL ON THE CASE BREAKING, THERE WILL BE LEAKAGE AND WATER WILL PENETRATE THE WATCH, AND THE WARRANTY ON THE WATCH WILL BE DECLARED VOID.

Over time, seals will age and become worn, which will have a negative impact on the water resistance of the watch. We recommend that you have the condition of the gasket examined and the water resistance

checked once a year at an authorized service center and have the seal replaced if necessary.

2. CARE

We recommend that you clean the watch regularly (except for the leather strap) with a soft cloth moistened with warm soapy water.

3. PRECAUTIONARY MEASURES

- Never attempt to open the case or remove the back cover by yourself.
- The rubber gasket protecting the watch from water and dust should be replaced every 2-3 years.
- If the inside of the watch gets wet, you should bring it to an authorized service center to have it checked immediately.
- Do not expose the watch to extreme temperatures.
- Treat the watch with care and avoid any hard impact (bumps, falls, etc.).
- Do not fasten the strap too tightly. You should be able to slide a finger between your wrist and the strap.
- The watch should be stored in a dry place.

- Do not let it come in contact with gasoline, cleaning solvents, spray aerosols, adhesives, paint, etc. These substances cause chemical reactions which could damage the gasket, case and the polished surfaces of the watch.
- Sapphire crystal is quite durable, but it may crack if the watch is dropped or hit.
- Avoid storing your watch with precious jewelry, as diamonds can damage sapphire crystal.
- It is preferable to store the watch in a special separate box, lined with soft protective material.

TECHNICAL SPECIFICATIONS

Case diameter	46 mm
Case material	316L Steel
Strap width	22 mm
Type of glass	Sapphire crystal
Movement	Miyota 8215 automatic winding movement
Accuracy	-20 ...+40 seconds per day
Number of stones applied	21
Power reserve	42 hours

WARRANTY

In accordance with the Decree of the Government of the Russian Federation No. 471 from 27.05.2016 «On amendments to certain acts of the Government of the Russian Federation on the return or exchange of technically sophisticated goods», this product is categorised as a technically sophisticated, and therefore, the buyer does not have the right to demand a free replacement for the repair period or a demand it be replaced with a similar product, and the buyer does not have the right to return or exchange the product with similar products of a different size, shape, different dimensions, style, colour or configuration.

The warranty only applies to products purchased from authorized sales outlets.

The manufacturer's warranty is valid for one (1) year from the date of sale of the product. The warranty covers defects and faults in assembly materials. If a problem should arise during the warranty period, the manufacturer shall rectify any defects or repair any malfunctions absolutely free of charge. If the quality of the watch is not able to be restored through repairs, the manufacturer guarantees the replacement of the watch with the same watch or a model

with identical specifications. Repairs should only be carried out at authorized service centres. The contact details for authorized service centres are provided by authorized sales representatives.

LIMITATIONS AND RESTRICTIONS

The warranty does not cover:

- glass and strap;
- wear and tear or defects resulting from the use of the watch (e.g. scratches on the glass, changes in the colour and/or material of non-metallic straps and bracelets, etc.);
- any damage to any part of the watch resulting from improper use, lack of care, or careless handling of the watch (bumps, chips, dents, cracks, etc.);
- any unauthorized repair or the owner's own tampering with the design of the watch and/or its appearance automatically excludes these watches from warranty service.

WARRANTY CARD

All warranty claims for repairs must be accompanied by a warranty card which has been filled out by both the buyer and the vendor who sold the watch.

SERIAL NUMBER _____

DATE OF SALE _____

VENDOR

name of trading
organization _____

Address and phone
number _____

(trading organization)

STAMP HERE _____ BUYER

I have read and agree with the terms of use. I do not have any complaints regarding the appearance or the performance of the watch.

**ATTENTION! THE WARRANTY CARD IS NOT VALID
WITHOUT THE VENDOR'S STAMP!**

NOTES

Name of the authorized service centre

The following steps have been taken in troubleshooting:

Service centre employee Date

(Signature, full name)

Owner Date

(Signature, full name)

NOTES

+7 (351) 700-13-80
+7 (351) 700-13-79

454091, Russian Federation,
Chelyabinsk, 25 Tsvillinga Street

marketing@molnija-ltd.ru
www.molnija-ltd.ru
www.molnija.shop

Молния